

E-CLEAN EC03
Robotic Vacuum Cleaner

User's Manual

E-CLEAN

Contents

Safety Instructions 4

Safety Notice 4

Battery and Recharging Instructions 5

Notes on UV light..... 5

Introduction 6

Features 6

Package Contents 6

Product Overview 7

Control Panel..... 8

LED Indicators 8

Getting Started 9

Installing the Side Brush..... 9

Installing the Battery 9

Charging the Battery..... 10

 Charging with Recharging Dock 10

 Charging with Power Adapter 10

Installing the Memory Card..... 11

Using the Remote Control 11

Installing the Batteries 11

Using the Keypad 11

Starting Operation 12

Stopping Operation..... 12

Scheduling Cleaning Time..... 12

Remote Operation..... 13

Initial Setup via EClean Web Management 13

 Wireless Connection Configuration 14

 Email Settings 15

 Cloud Storage Settings..... 15

 User and Password Settings 16

 Video Control and Quality Settings..... 17

 Cleaning Schedule Setup 18

Using RemoteClean Application 19

 Installing RemoteClean Application 19

 Connecting to Your Smartphone 19

Operate the Device.....	21
Viewing the Motion Detect Screenshot.....	22
Viewing the Recorded Videos	23
Specifications	24
Appendix	25
Maintenance	25
Cleaning Brushes	25
Cleaning Dust Bin	26
Cleaning Intake Filter	26
Troubleshooting.....	27
General	27
Error Indicators	28
Product Warranty.....	29
Customer Copy.....	31

Safety Instructions

Please read the safety notice in the User's Manual before operating EClean and keep this manual handy for your future reference. Observe the basic safety rules to prevent any occurrence of electric shock and personal injury.

Safety Notice

- To reduce the risk of electric shock, do not disassemble the product. Do not sit on the product or place any object upon it under any circumstance.
- Please pay special attention to prevent children, the elderly or pets from any danger.
- Keep away from fire or other volatile flammable liquid when using the product.
- Do not cleanse the product with water, or use it on moist surfaces to avoid malfunction of electrical wire or component.
- Do not expose the product to direct sunlight, otherwise machine operation may be interfered.
- To avoid eye damage, do not look straight into the Ultraviolet light (UV light) when it's on.
- To avoid malfunction, please ensure the air outlet is not blocked by foreign objects while using the product. To avoid trapping the product, please clear the cleaning zone and remove items, such as clothes, wires and plastic bags, before cleaning.
- To avoid danger, please remove the Venetian blinds, curtains, bed sheets or carpet tassels from the cleaning ground.
- The product is for domestic use only and not intended for factory or any business-related use. If the product is damaged due to misuse, the warranty shall be avoided. If the product is sent for repair, the fees for labor and parts shall be assessed at our discretion.
- The ideal operating temperature range is 0°C to 45°C. Subject the product to temperatures outside of this range may cause malfunction.
- If you have any problem using the product, please contact our dealers.

Battery and Recharging Instructions

- Only use factory-installed battery and adapter (model:CWN20C20).
- The battery is rechargeable. Please use the voltage and current specified on the packing. If you are not sure of the voltage and current of your house, please contact your local power company or a licensed electrician.
- Charging adaptor is for indoors only.
- Do not recharge the battery if the cable or plug of the battery is damaged.
- Never touch the charger, plug or cable with damp hands.
- If the product requires cleaning, unplug the adaptor, switch off the unit and take out the battery.
- Please take out the battery pack before disposing of the unit.
- Please switch off the product before taking out the battery.
- Please recycle and dispose the waste battery properly.

Notes on UV light

This device is equipped with Ultraviolet (UV) light to sanitize floor surface while cleaning.

- EClean will turn on the UV light while cleaning, and it will automatically turn off once you pick up the main unit.
- EClean will turn off the UV light once cleaning operation is discontinued.

Introduction


Congratulations on purchases the EClean EC03 Robotic Vacuum Cleaner. The device is equipped with a high sensitive wide-angle lens, and embedded the cloud intelligent remote management system that redefines your imagination of cleaning robot.

Features


- High definition 135° wide-angle lens for broad and vivid video quality.
- Negative ions generator that effectively help to freshen and purify the air quality by eliminating most tiny floating particles.
- Equipped with Ultraviolet (UV) light to sanitize floor surface while cleaning.
- Supports weekly cleaning schedule setting.
- Support Cloud service for video upload and download.
- Free downloadable *RemoteClean* application for remote operation and video playback on iOS and Android devices.

Package Contents


The package contains the following items. If any one of the items is missing, please contact our dealers.

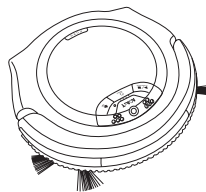


EClean

 


Recharging Dock

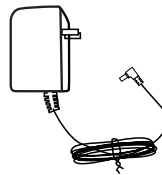


Power Adapter

 

Battery

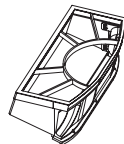


Dust Bin

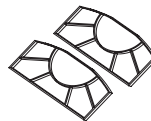

Filter (2 pcs)



 Side Brush (2 pcs)



RJ45 Cable



Micro SD card
(4GB)



Remote Control &
AAA Battery (2 pcs)




User's Manual




Quick Start Guide



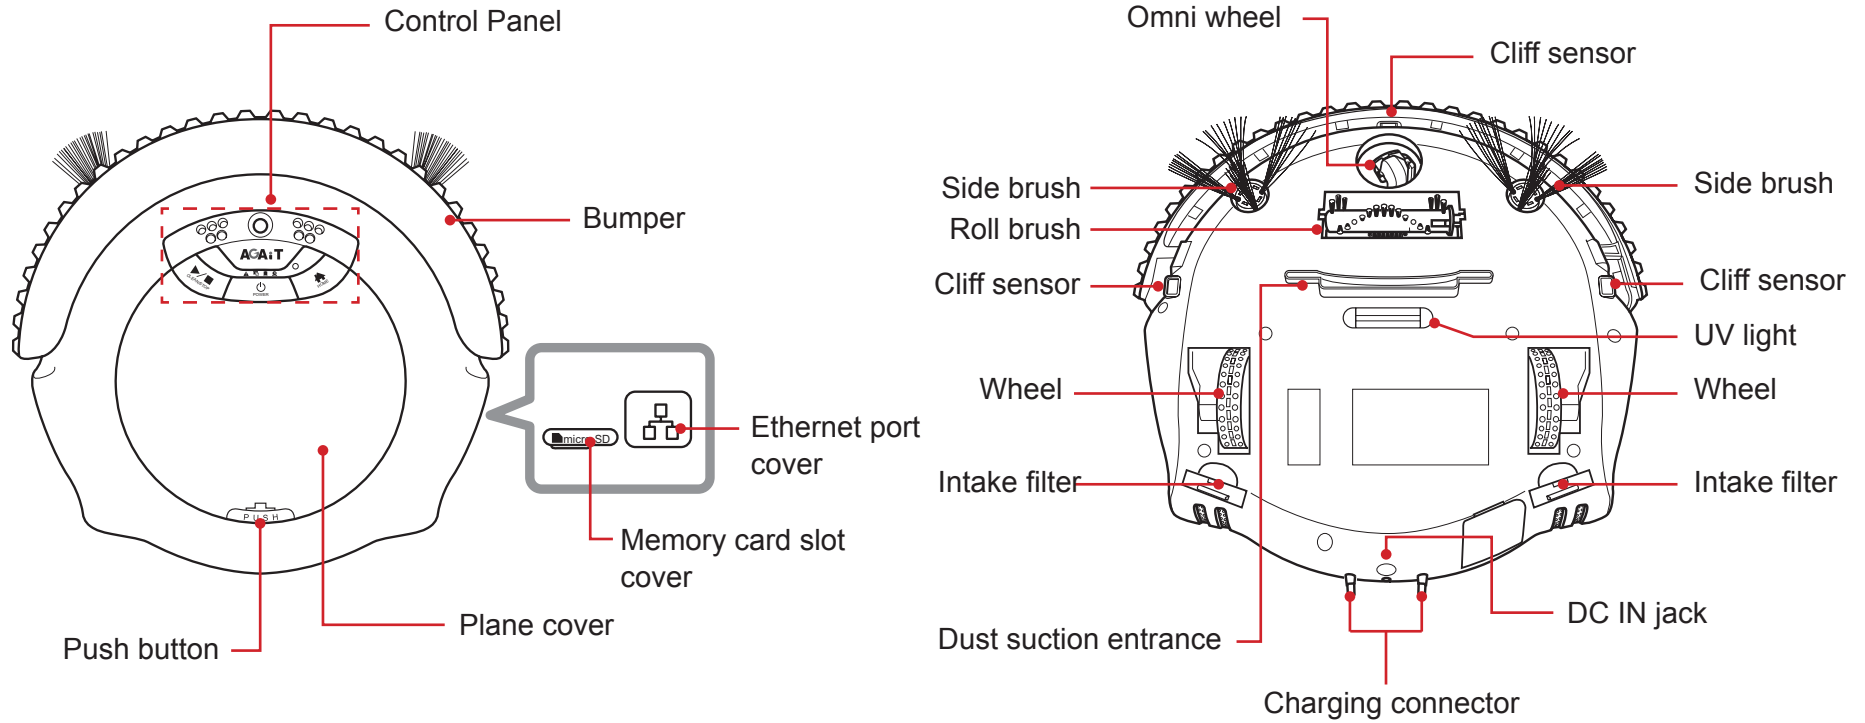

Product Overview

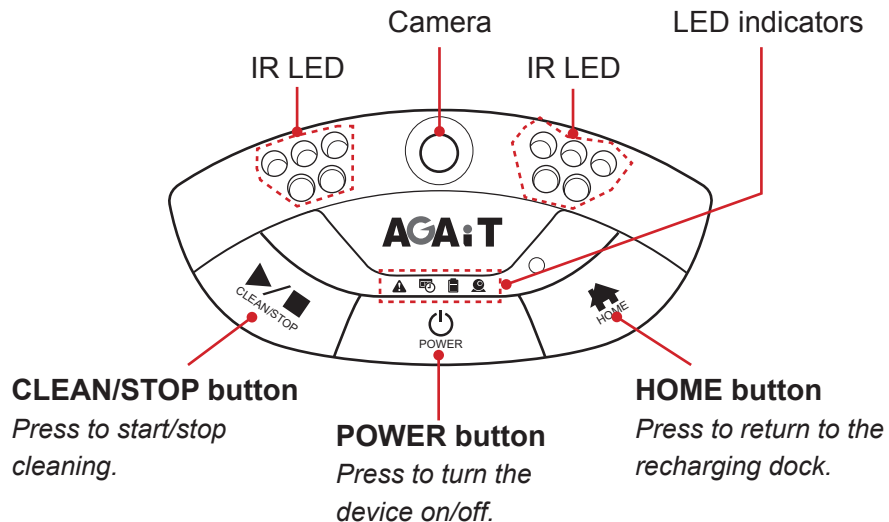

Control Panel




LED Indicators

Icon	Color	Descriptions
 (Camera)	Blue (Solid)	Camera is turned on.
	Blue (Flashing)	Motion is detected.
	Green (Solid)	IR LED is activated.
 (Battery)	Red (Flashing)	Low battery
	Green (Flashing)	Start cleaning
 (Schedule)	Green (Flashing)	Battery charging
	Green (Solid)	Charging complete
	Green (Solid)	Power on
	Green (Flashing)	Start scheduled cleaning
 (Error)	Blue (Solid)	Soft touch (press one of the remote control buttons).
	Red (Solid)	EClean detects a cliff ahead.
	Red (Flashing)	An error occurs when EClean is operating. EClean will stop operating.

Getting Started


Installing the Side Brush

1. Place EClean side down on a stable surface.
2. Push the brushes directly onto the holders as shown in the illustration below.

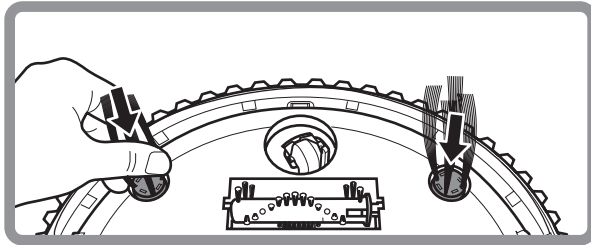


Installing the Battery


1. Push the **PUSH** button to open the plane cover.

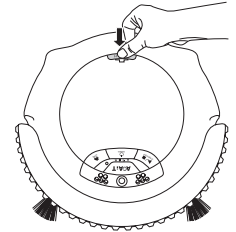

2. Use your fingertip to release the battery latch. Then, remove the battery cover.

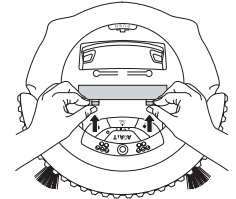

3. Install the battery into the battery compartment.
4. Close the battery and plane covers.

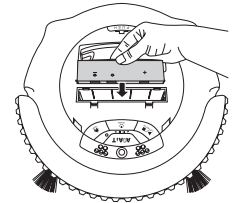

Charging the Battery


If the battery LED is flashing red, use either the recharging dock or adapter for recharging. Approximate charging time is 3 hours.

Note:

Actual charging time depends on current battery capacity and charging conditions.

Charging with Recharging Dock

1. Connect one end of the power adapter to the DC-IN jack of the recharging dock.
2. Plug the other end of the power adapter into an electrical outlet.

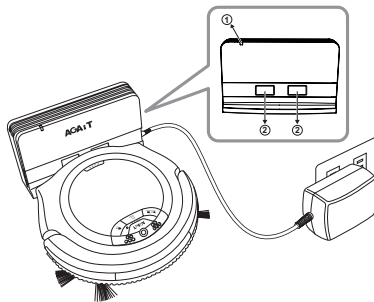


3. Press the **HOME** button.
EClean will automatically return to the recharging dock. If EClean is properly connected to the recharging dock, it will beep three times and EClean will start charging.

Note:

- When the scheduled cleaning time ends, EClean will also automatically return to the recharging dock.
- Do not place objects near the recharging dock to avoid obstructing EClean returning to the recharging dock.

Charging with Power Adapter


1. Connect one end of the power adapter to the DC-IN jack of the device.
2. Plug the other end of the power adapter into an electrical outlet.

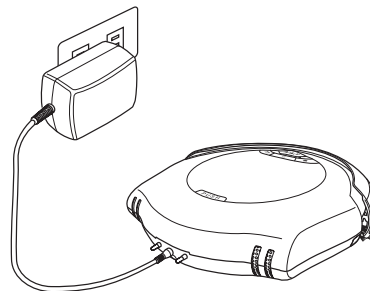

Installing the Memory Card

The installed memory card is used as a buffer storage before EClean uploads the recorded files to Asus Cloud server.


1. Open the memory card slot cover.
2. Insert the micro SD card into the card slot with the gold contacts facing down.
3. Push the micro SD card until it clicks into place.

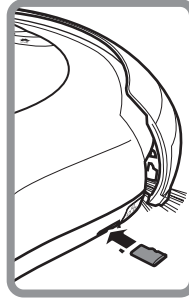


Using the Remote Control



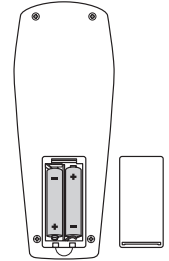


Installing the Batteries

1. Use your fingertip to open the battery cover.
2. Align the batteries contacts and then insert the batteries into the compartment.
3. Close the battery cover.

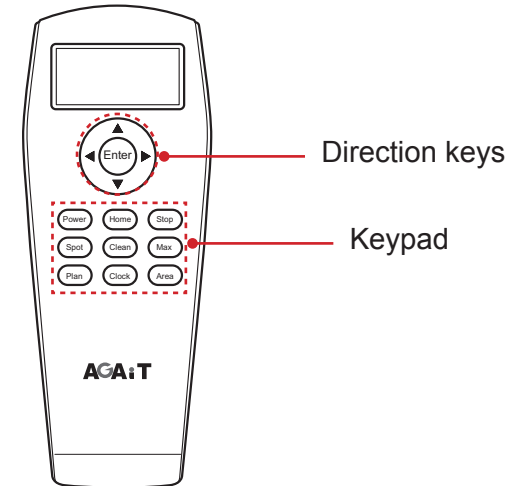

Using the Keypad



Button	Description
Power	Turn the device on/off.
Home	Locate the recharging dock and automatically return its charging position. Note: <i>This function is not available in "Max" mode.</i>
Stop	Stop cleaning.
Spot	Activate "Spot Cleaning" mode.
Clean	Start cleaning. Press the button repeatedly to switch the cleaning mode. •  (Random) •  (Along Wall) •  (S Shape) •  (Polygonal) •  (Spiral) Note: <i>This function is not available in "Max" mode.</i>
Max	Continue cleaning until the battery power runs out. Note: <i>"Home" function is not working in this mode.</i>
Plan	Activate and configure cleaning schedule.
Clock	Set the date and time.
Area	Manually set the cleaning area.

Starting Operation

After the battery is fully charged, press the **Power** button to turn EClean on. Then, press the **Clean** button to start cleaning. Press the **Clean** button repeatedly to select the desired cleaning mode.

Note:

- You can also press the **START/STOP** button on the control panel to start cleaning.
- When EClean is lifted or when a foreign object is entangled, EClean sounds the alarm and the error LED is on. EClean will stop operation.

Stopping Operation

Press the **Stop** button to stop cleaning.

Note:

You can also press the **START/STOP** button on the control panel to stop cleaning.

Scheduling Cleaning Time

Press the **Plan** button to specify the desired cleaning time. Use the **Direction** keys to schedule the cleaning time.

At the specified time, EClean starts cleaning for an hour, then return to the recharging dock when it is complete.

Remote Operation


Before enabling the remote operation via smartphones or tablet PC, do the following initial setup to obtain an IP address for your EClean.


System Requirement

- Windows OS: Microsoft Windows® XP or Windows® 7
- Web Browser: Internet Explorer 6, 7, 8, 9 or above

Initial Setup via EClean Web Management

1. Copy the **AGAiT_Finder.exe** file into your notebook.
2. Disable the Wi-Fi function on your notebook.
3. Open the Ethernet port cover.
4. Connect one end of the network cable (an RJ45 cable) to the Ethernet port of the device.
5. Plug the other end of the network cable to a Ethernet port on your notebook.

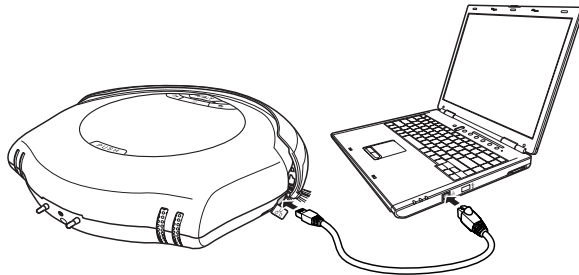

6. Turn on EClean and wait until the camera LED turns up.
7. On the Windows task bar, observe your notebook LAN icon.
8. Once the LAN icon appears as below illustration, double-click AGAiT_Finder icon () to execute the program.




9. After connection is established, the web browser is automatically launch and enter EClean Web Management login page.

10. Enter the login name and password. The default values are "admin".




11. Click **Login**. The main screen appears on the screen.

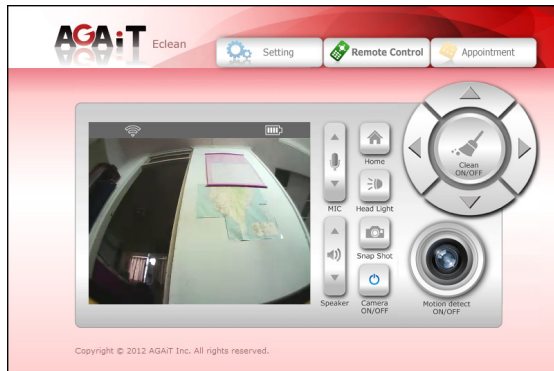

Wireless Connection Configuration

1. Click **Setting** tab, and select **WIFI**.
2. Click **Scan**. The available networks are listed.

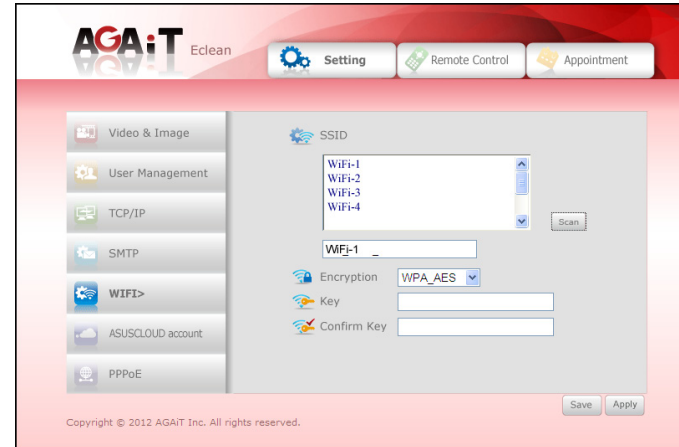

3. Tap a network to connect to.
4. When connecting to a secured network, enter the password in *Key* and *Confirm Key*.
5. Click **Save**, then click **Apply**.


Email Settings

Be sure that you have a Gmail account before proceeding with the email setup.

Note:

To register a Gmail account, visit <https://accounts.google.com/>. Follow the on-screen instructions to complete the account setup.

1. Click **Setting** tab, and select **SMTP**.

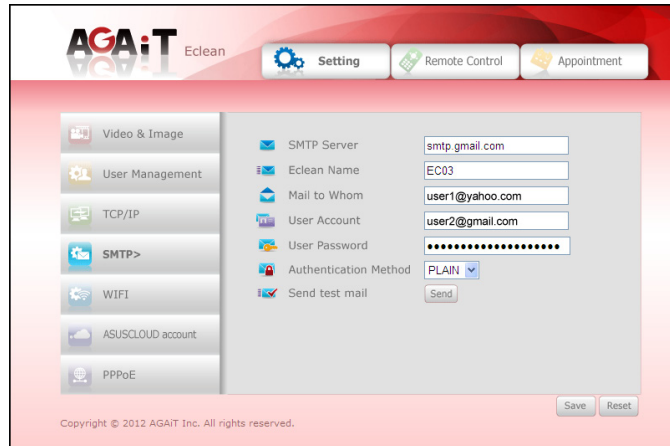

2. Enter the *SMTP Server* of the sending email server, the email address and password of the sender in *User Account* and *User*

Password respectively.

Note:

By default, the Gmail server is “smtp.gmail.com”.

3. In *Mail to Whom*, enter the email address where the notification email is to be sent.
4. In *Eclean Name*, enter the device name (if necessary).
5. After all settings are complete, click **Save**. The information on the IP address will be sent to the recipient's email account.

Note:

*To test the configuration, click **Send**.*


Cloud Storage Settings

Be sure that you have an Asus WebStorage account before proceeding with the cloud storage setup.

Note:

To register an Asus Web Storage account, visit <https://www.asuswebstorage.com/navigate/reg>. Follow the on-screen instructions to complete the account setup.

1. Click **Setting** tab, and select **ASUSCLOUD** account.

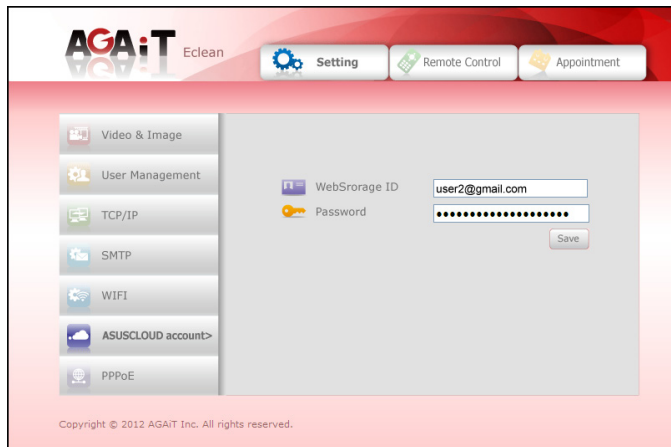

2. Enter the email address and password of the sender in *WebStorageID* and *Password* respectively.
3. After all settings are complete, click **Save**.


Note:

To test the configuration, click **Send**.

User and Password Settings

The User Management page allows you to authorize users and set the access rights in using EClean Web Management. You can also configure the date and time settings. By default, *User1* is set to administrator account. The administrator account's user name and password are "admin".

1. Click **Setting** tab, and select **User Management**.

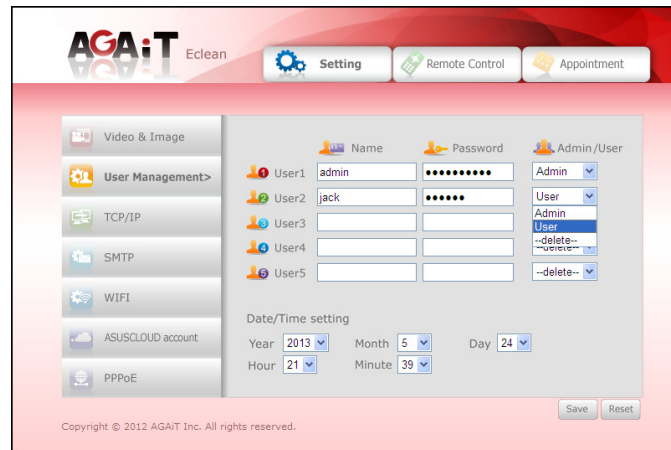

2. To configure another user(s), enter the user name and password in *User2*, *User3*, *User4*, or *User5*. Then, set the access right for new user(s).

Note:

Only "Admin" has the access rights to configure the settings in EClean Web Management.

- On *Date and Time* setting, set the correct date and time. Click the pull-down menu icon(▼) to select one of available field options.

- After all settings are complete, click **Save**.


Video Control and Quality Settings

The Video and Image page allows you to configure how you want the video to appear on the live view screen.

- Click **Setting** tab, and select **Video and Image**.

- On *Video Control*, set the desired video source, picture quality, and video frame rate.
- On *Video Quality*, set the desired brightness, contrast, saturation, sharpness, and hue settings.

Note:


Click the pull-down menu icon() to select one of available field options.

4. After all settings are complete, click **Save**.

Cleaning Schedule Setup

The Appointment page allows you to configure the weekly cleaning schedule.

1. Click **Appointment** tab.

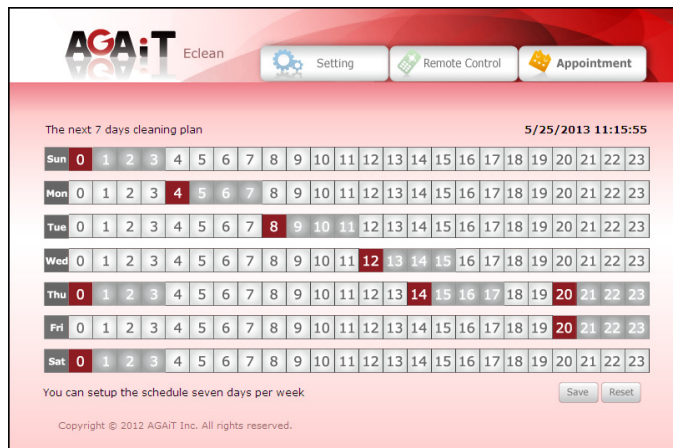

- Click the time slot on the desired day(s). By default, each cleaning time allocates 1 hour of cleaning and 3 hours of battery charging.
- At the specified time, EClean starts cleaning for an hour, then return to the recharging dock when it is complete.

Note:

You can schedule up to 21 cleaning times per week (maximum of 3 cleaning time daily).

Using RemoteClean Application

With RemoteClean application, you can manage the cleaning task via Internet easily and monitor your home application from anywhere at anytime.

List of Supported Devices


- Android: Android 4.0 or above
- iOS: iOS 4.0 or above

Installing RemoteClean Application

1. Launch *Play Store* (Android devices) or *App Store* (iOS devices) application.

Make sure your smartphone is connected to the Internet.

2. On the search bar, enter the keyword "remoteclean" to search *RemoteClean* application.
3. Download and install *RemoteClean* application into your smartphone.

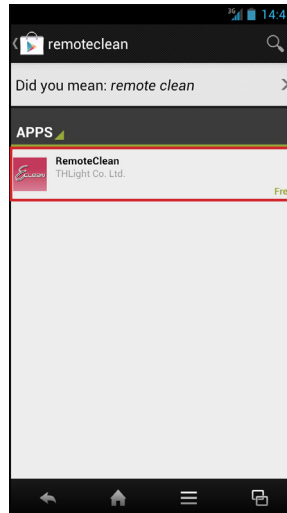

Note:

The application user interface varies depending on the device operating system and design.


Connecting to Your Smartphone

a. Creating EClean Profile

1. Launch *Email* application.
2. Open the email that contains the IP address information.

There are two types of IP addresses:


- WAN IP address: Use this IP address if you are using *RemoteClean* application outside the network coverage of your wireless router.
- Local IP address: Use this IP address if you are using *RemoteClean* application within the network coverage of your wireless router.

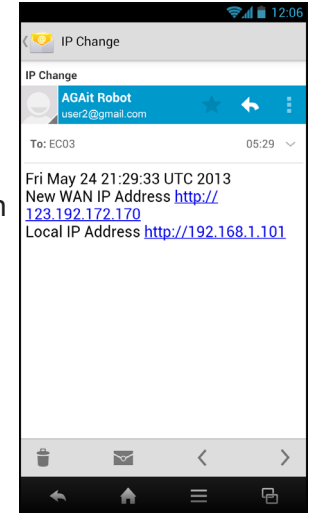

3. Launch *RemoteClean* application.

4. Tap **Add**.

5. Enter EClean name and the IP address.

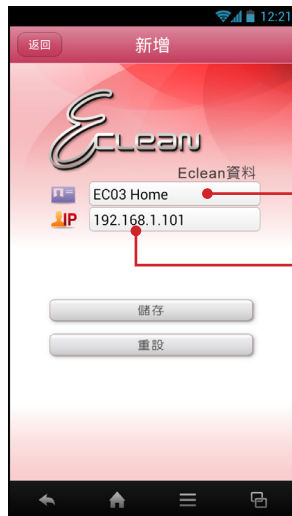

Enter EClean name.

Enter the IP address.

6. Tap **Save**.

The added EClean profile is displayed on the screen.



b. Managing EClean Profile

1. Tap the profile that you want to edit.

2. Do one of following:


- **Operate EClean:** Tap to operate EClean.
- **Edit EClean Profile:** Tap to edit the profile. Enter the new name or IP address and tap **Save**.
- **Delete EClean Profile:** Tap to delete the selected profile.




Operate the Device

There are two ways to remotely operate EClean.

- EClean Web Management

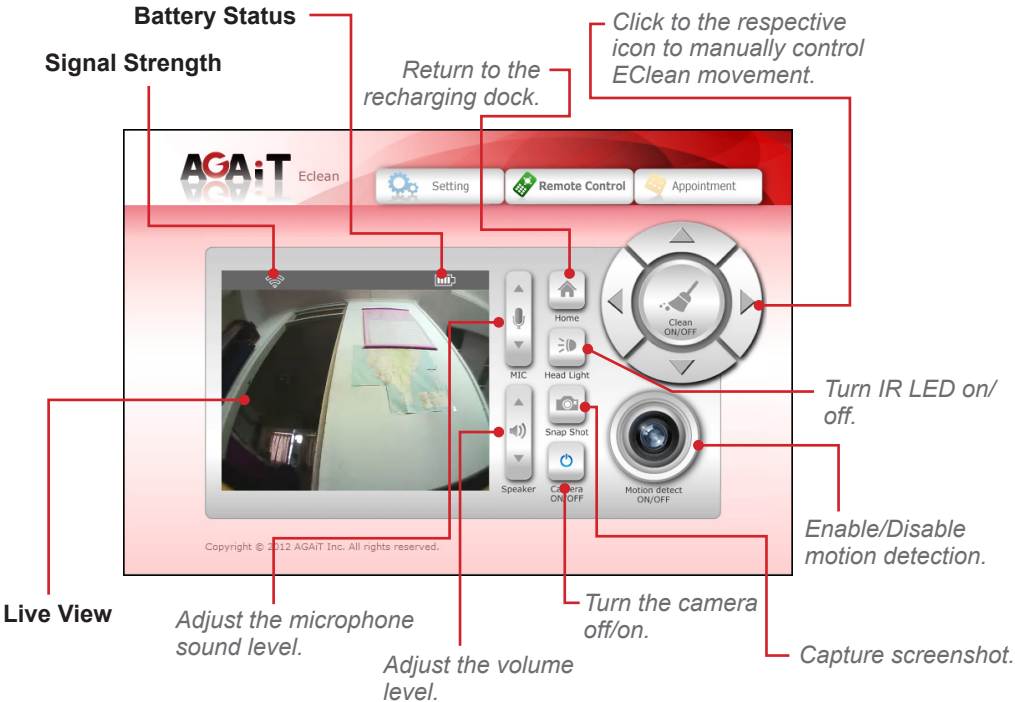


- RemoteClean Application

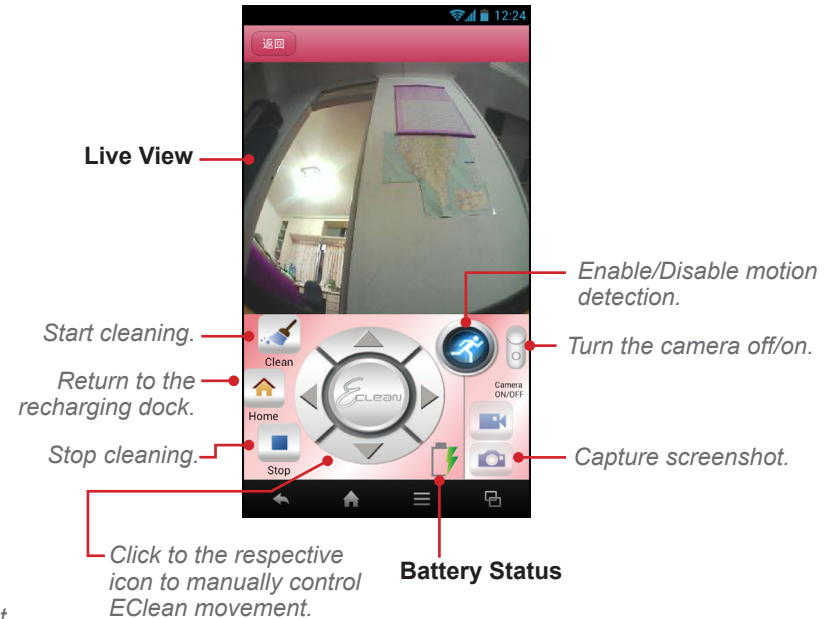

Viewing the Motion Detect Screenshot

When the battery is charging, the system will automatically send email notifications once motion is detected.


1. Launch *Email* application.
2. Open the email that was sent by AGAiT Robot with a “Motion Alarm” title.

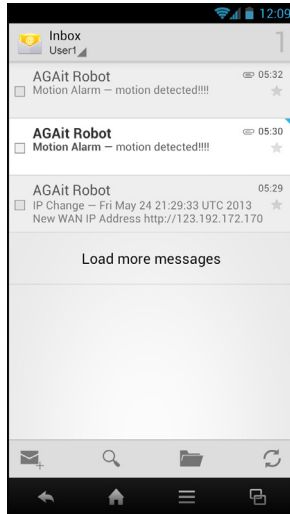

3. To view the screenshot, tap the **Attachment** tab.

4. Do the following:


- Tap **VIEW** to view the image in full screen.
- Tap **SAVE** to save the screenshot into your smartphone.

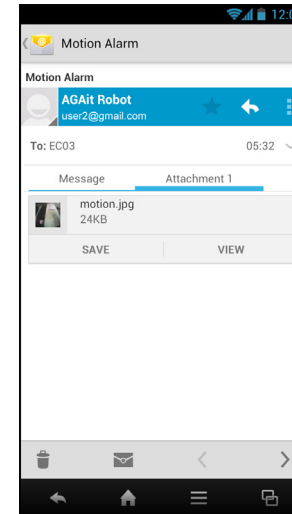

Viewing the Recorded Videos

Once motion is detected, besides sending notification email with the captured screenshot, the system will also automatically record 1-minute video (approximately 2MB) and upload it directly to Asus WebStorage.

1. Launch *RemoteClean* application.
2. Tap the profile that you want to access.
3. Tap **Operate EClean**. Then, enter the login name and password.
The default values are “admin”.
4. To access the WebStorage, tap **Access Cloud Storage**.
5. Enter the WebStorageID and its password.
See “Cloud Storage Settings” on page 15.
6. Browse the uploaded videos. Then, click the desired video that you want to view.

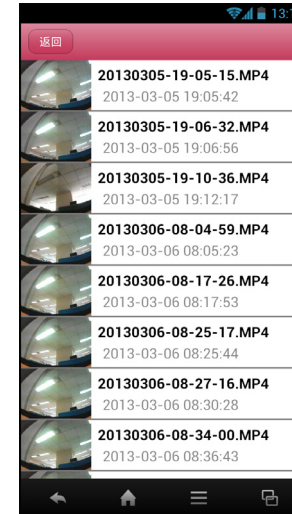

Specifications

Item	Specifications
Operation Time	90 minutes
Dust Bin Capacity	0.2 liter
Suction Power	>=140 mmAq
UV light lifespan	6000 hours
Moving speed	24 cm/sec
Types of movement	Spiral, Special Bounce, Along Wall, S Shape, Polygonal
Wireless Security	802.11n WEP 64-bit and 128-bit encryption WPA (Wi-Fi Protected Access) WPA2 (Wi-Fi Protected Access)
LAN	RJ45 x1
Camera	0.3M pixels
SD Socket	Micro SD slot x1
IR LED	IR LED x10, enable under 15lux.
Battery	14.8V, 2500 mAh, rechargeable Li-Polymer battery

Item	Specifications
AC adapter	Output: 20Vdc, 1000mA max 1.5A, 100 minutes for full charging
	Input: 100~240V AC, 50/60Hz universal
Charging Input Power	DC 20 Volt, 1.0A max 1.5A
Power Consumption	Max. 30W
Dimensions	348(L) x 349(W) x 84(H) mm including wheels
Weight	2.7kg

**Design and specifications are subject to change without prior notice.*


Appendix

Maintenance

Cleaning Brushes

To clean the side brushes, do the following:

1. Place EClean side down on a stable surface.
2. Hold the brush hair and pull upward to remove the brushes.

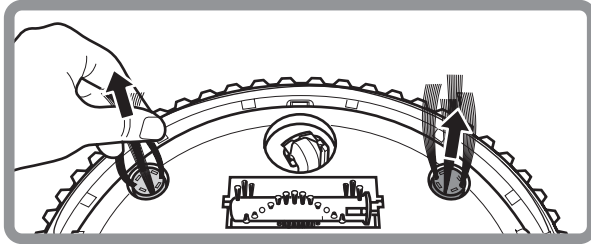


3. Remove hair and dust from the brush.

Note:

- After being used for a period of time, the brushes need to be replaced to clean more effectively.
- The side brushes can be rinsed and if they become crooked, you can scald them in hot water to make them return to original shape.

To clean the roll brush, do the following:


1. Place EClean side down on a stable surface.
2. Pull and hold the brush latch, then lift upward to remove the roll brush from its slot.

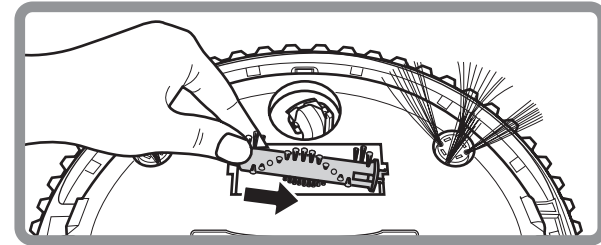

3. Remove hair and dust from the brush.

Cleaning Dust Bin

1. Push the **PUSH** button to open the plane cover.
2. Take out the dust bin from EClean.

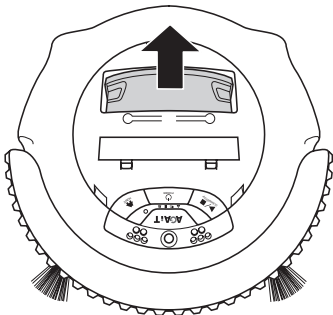


3. Open the dust bin filter.
4. Throw away the dust and dirt from the dust bin.
5. Rinse the dust bin with tap water.
6. Clean the filter with a soft bristle brush.

Note:

- *Dust will accumulate on the filter mesh, causing the cleaning efficiency to deteriorate. It is recommended to clean the filter after using EClean every 3~4 times.*
- *Make sure the dust bin is completely dry before reinstalling it into EClean.*

Cleaning Intake Filter

1. Place EClean side down on a stable surface.
2. Pull upward to remove the intake filter.

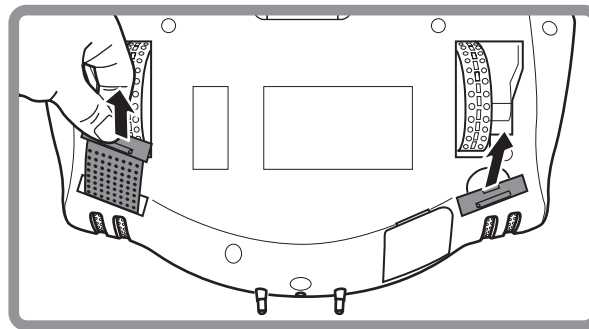

3. Clean the intake filter with a soft bristle brush.

Troubleshooting

General

Problem	Cause of failure	Solution
EClean won't start charging after returning to the recharging dock.	<ul style="list-style-type: none"> The recharging dock is not attached to the wall. The charging connectors are not properly connected to the recharging dock. 	<ul style="list-style-type: none"> Adjust the recharging dock position. Check the battery LED and schedule LED indicators on the control panel. See "LED Indicators" on page 8. If the problem persists, contact the service center.
EClean couldn't approach the recharging dock.	There is not enough space for EClean to return to the recharging dock.	Do not place anything near the recharging dock to avoid blocking the returning route.
The remote control is not working.	<ul style="list-style-type: none"> Batteries are not installed. Batteries are installed reversely. Batteries are discharged completely. 	<ul style="list-style-type: none"> Install the batteries properly. Replace with new batteries.
The side brush becomes crooked.	Being used for a long time.	Soak it in hot water to have it recover to its original shape.
The side brushes are trapped and stopped by cables and phone lines.	There are cables or cords on the floor.	Remove foreign objects from the floor, such as phone lines, cables, clothes, and cords.
Cannot clean certain large objects.	The objects are larger than the dust suction entrance.	Use other cleaning methods.

Problem	Cause of failure	Solution
Cannot detect EClean after executing AGAiT_Finder.exe .	<ul style="list-style-type: none"> • EClean is not fully starting up. • Wi-Fi function is activated. 	<ul style="list-style-type: none"> • Wait until the camera LED turns on. • Disable Wi-Fi function.
Cannot access EClean remote operation via <i>RemoteClean</i> application.	<ul style="list-style-type: none"> • Use wrong IP address. • The IP address has been changed. 	<ul style="list-style-type: none"> • Enter the correct IP address. • Check your email for the new IP address information.

Error Indicators

Error indication	Cause of failure	Solution
Flashes red once every four seconds	Dust bin is not in place	Make sure the dust bin is properly installed.
Flashes red twice every four seconds	Foreign objects in the main brush	Remove foreign objects. If the problem persists, contact the service center.
Flashes red three times every four seconds	Left bumper is stuck / Sensor failure	
Flashes red four times every four seconds	Right bumper is stuck / Sensor failure	
Flashes red five times every four seconds	Anti-drop sensor failure	Make sure the anti-drop sensor is not blocked.
Flashes red six times every four seconds	Left wheel is stuck / Sensor failure	Remove foreign objects. If problem persists, please contact service center.
Flashes red seven times every four seconds	Right wheel is stuck / Sensor failure	

Product Warranty

Under normal operating conditions, AGAiT provides a one-year limited warranty for Eclean, a six-month limited warranty for the battery, and including but not limited to a 3-month limited warranty for discount items. Warranty coverage begins from the day of purchase. Please refer to warranty terms at the time of purchase.

Limited Warranty Terms

1. Please enclose this warranty card when sending your Eclean for repair. Please keep this warranty card in a safe place, no warranty card will be reissued.
2. The limited warranty covered under these terms is valid only in the country where you were purchased.
3. Consumables are not covered by this limited warranty (e.g. filter, roll brush, side brush and wheel set).
4. During the warranty period, parts or products may be repaired or replaced with repaired parts or products of similar functions. AGAiT will return the repaired product or a replacement with similar functions to customers. All faulty parts or units removed from the product shall become the properties of AGAiT.
5. This limited warranty shall not cover defects as a result of the following circumstances:
 - a. removed, altered and/or illegible product serial number, accessory barcode and warranty seal; or
 - b. wear and tear of product as a result of normal use; or
 - c. damage arising out of not following instructions provided in the user's manual, fall due to improper handling, washing, use of Eclean in wet areas, use of Eclean in a temperature exceeding the recommended temperature range, a sudden change in the environment, opening or servicing Eclean or accessories by an authorized technician, repairing Eclean and accessories without genuine parts, accidents, use with excessive force, or unreasonable operation of AGAiT products.
6. Consumers should notify AGAiT or its authorized dealers within a reasonable timeframe from detecting the defect to apply for service covered by this limited warranty. No request for warranty service after warranty expiration will be considered.

7. Consumers are recommended to take the following actions if there are problems with Eclean:
 - a. Please refer to the user's manual to locate the problem and possible solutions.
 - b. If the problem persists, consumers should contact their local dealer from which Eclean was purchased, the online dealer or the AGAiT Call Center for further instructions.
 - c. Consumers should prepare the following information before contacting AGAiT Call Center, AGAiT agents or dealers:
 - The model number, serial number and color of the Eclean purchased.
 - The complete address and contact information of the consumer.
 - The photocopy of the purchasing invoice, receipt or sales statement. AGAiT will inform consumers of the time, place and manner of returning the faulty Eclean. If the warranty of the faulty Eclean is still valid, AGAiT will be responsible for all delivery fees.
8. If the consumer have lost the warranty card, purchasing invoice, purchasing receipt, sales statement or any purchasing voucher, AGAiT will calculate the warranty period by adding three months to the manufacturing date of Eclean.

In case of damage as a result of any of the following reasons, customers must pay for the delivery, repair, maintenance and labor of Eclean:

1. Any product with the warranty sticker or bar code being destroyed, obliterated, soiled or modified.
2. Damages/malfunctions caused by parts not produced by the company.
3. Any repairs caused by inappropriate installation and usage (for voltage requirement, refer to User's Manual).
4. Act of God, force majeure, deliberate damage or improper operation, such as: not following the instructions provided in the user's manual.
5. and any damage unrelated to the product itself.
6. Any damage caused by unauthorized disassembling, modification of the specification or installing any unlicensed parts.

Should you have any problems regarding the use of Eclean or accessories, please contact an AGAiT dealer or the shop where your Eclean was purchased.

Customer Copy

Product information: _____

Salesperson: _____

Name: _____

Model Number: _____

Serial Number (P/N): _____

Date of purchase: ____ / ____ / ____

Dealer name / store stamp



* To protect your rights and benefits, please pay attention to the following:

1. Please keep the purchase voucher, such as the invoice, receipt etc. Without the purchase voucher, AGAiT will calculate the warranty period by adding three months from the manufacturing date of Eclean.
2. Please fill out the warranty card with accurate information. The warranty card will be validated only with the dealer's stamp.
3. Please prepare the following information when requesting service:
 - The model number, serial number and the information of the shop where your Eclean was purchased.
 - Your complete address and contact information.
4. To guarantee your after-sales service rights, please register your product online within one month after your purchase. After registration, you can become an AGAiT member and enjoy more exclusive membership benefits (Taiwan only).